

Solution for the sound on the Dell 5430's.

Right click on the speaker icon on the bottom right of your screen.

Choose Sounds



Click the Playback tab

Right click on the Speakers/Headphones icon and choose Properties

Click on the Advanced tab and click on the Restore defaults tab and click OK

Click the Playback tab. Right click on the Speakers/Headphones and choose Test. You should now have sound!



